

1.



**Restore Defaults**

2.



**Set Factory Defaults**

3.



**Disable Keypad Emulation**

4.



**Disable Quick Keypad Emulation**

5/1.



**Slovak**

5/2.



**Slovak (QWERTY)**

6.



**Add Enter Key (Carriage Return/Line Feed)**